


## THE AIL-PMG-10F' S CONTROLS.

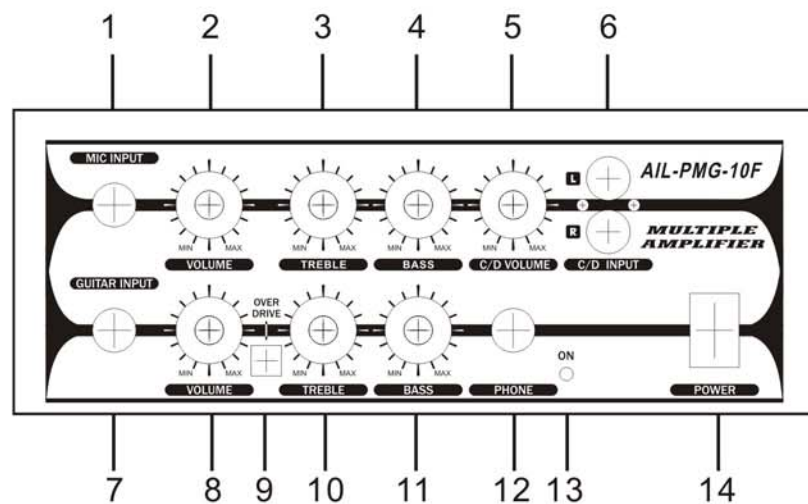

1. MIC INPUT  
This is an input jack for connecting your MIC.
2. VOLUME  
If you turn the control clockwise the volume will increase.
3. TREBLE  
Adjusts the amount of high frequency sounds.
4. BASS  
Adjusts the amount of low frequency sounds.
5. C/D VOLUME  
This volume sets the volume of CD, MP3 or Auxillary Item.
6. C/D INPUT  
This input allows you to connect a CD, MP3 or Auxillary Item.
7. GUITAR INPUT  
This is an input jack for connecting your GUITAR.
8. VOLUME.  
If you turn the control clockwise the volume of the guitar will increase.
9. OVER DRIVE SELECT SWITCH  
This ON/OFF button provides a distortion effect when pushed in.
10. TREBLE  
Adjusts the high frequencies for the guitar input.
11. BASS  
Adjusts the low frequencies for the guitar input.
12. PHONE  
This is a headphone' s output jack.  
For private sessions, plug a stereo headphones into this jack.  
The headphones not included.
13. POWER INDICATOR  
Illuminates when power is switched to ON.
14. POWER SWITCH  
This switch turns AC power ON and OFF when the switch is OFF, the amplifier is completely shut down.